ACCESSORY SETUP INSTRUCTION

SINGLE-ROW FOUR-POINT DRIVER SEAT BELT ASSEMBLY -- PN: 5DYV-805900-1000
VALID FOR: **CF1000SU**
The installation steps of the four-point driver seat belt assembly are the same as the four-point passenger seat belt assembly.

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.
Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS

i - Indicates information with more details or tips.

! - Indicates information of warning or danger.

PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	DISCRIPTION
1	FOUR-POINT SEAT BELT	5CYV-805900-1000	1	For structure reference only
2	FOUR-POINT DRIVER SEAT BELT ASSEMBLY	5FYV-342100-1000	1	
3	7/16" NUT	5ASV-341100-6200-25	4	
4	LOCK WASHER	5ASV-341100-6200-26	4	
5	PLAIN WASHER	5FYV-341100-1000-27	4	
6	7/16" BOLT	5FYV-341100-1000-21	4	
7	NUT	5FYV-342100-1000-20	4	
8	FOUR-POINT PASSENGER SEAT BELT ASSEMBLY	5FYV-342200-1000	1	

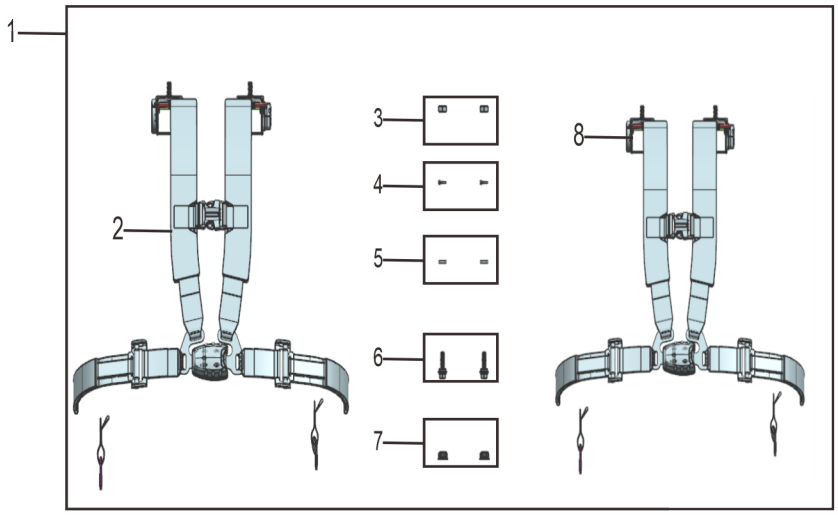

TOOL LIST:

ITEM	DESCRIPTION	QTY.	DISCRIPTION
1	SOCKET S=19mm	1	
2	SOCKET S=18mm	1	
3	SOCKET S=14mm	1	
4	OPEN-END WRENCH 14mm	1	
	OPEN-END WRENCH 19mm	1	
5	INNER SPLINE ALLEN KEY T30	1	
6	ELECTRIC WRENCH	1	
7	PROTECTIVE GLOVES	1	

ASSEMBLY and INSTALLATION

// Remove the seat before installing the single-row four-point driver seat belt assembly.

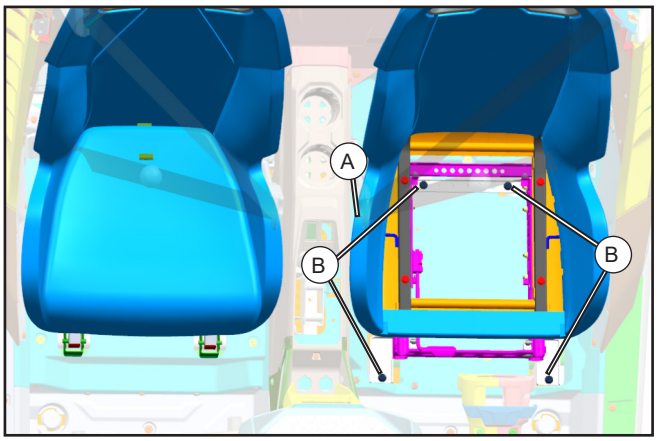

// The driver seat cannot be quickly removed. Remove the cushion of the seat (A), then loosen the bolts (B) with the tool to remove the seat (A).

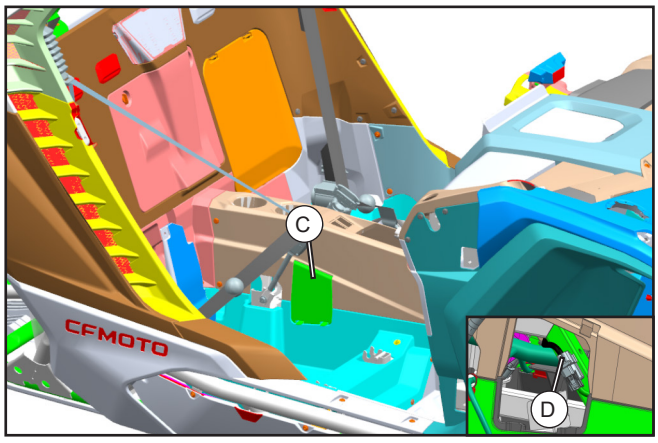

// After removing the driver and passenger seats, remove the maintenance quick-release plastic parts (C), and unplug the induction harness interface (D) of the driver seat belt from the maintenance port.

ASSEMBLY and INSTALLATION

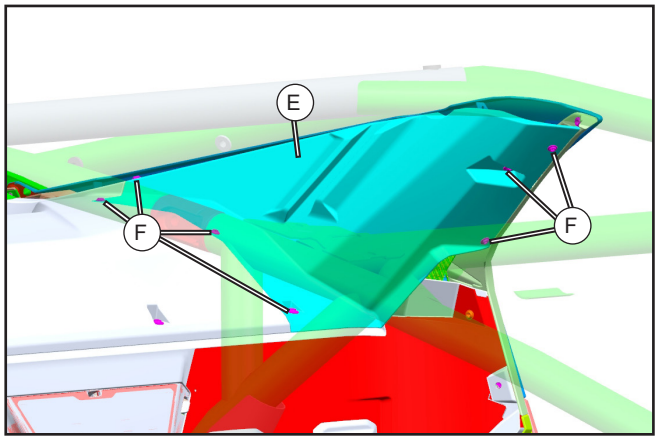

// Remove the screws (F) from the mounting holes on the blue plastic part (E), and then remove the blue plastic part (E).

- Note that the plastic part (E) here and the plastic part on the right share the same removal method.

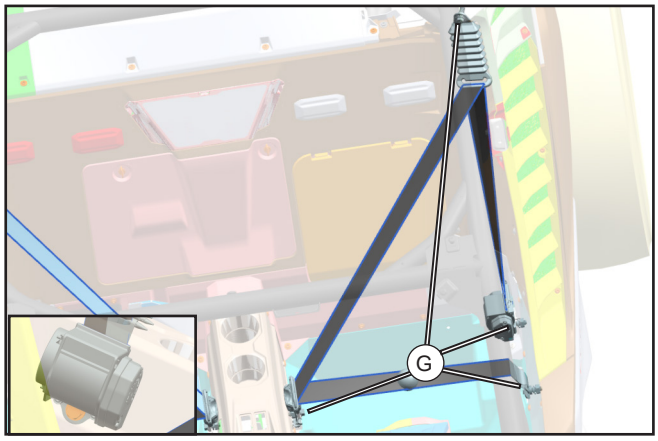

// Remove the bolts of the three-point seat belt (G), and then remove the seat belt.

- The three-point seat belt of the passenger seat shares the same removal method.

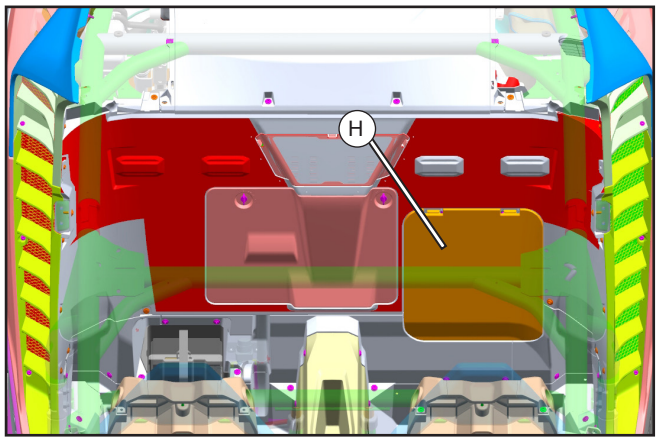

// Remove the service cover (H).

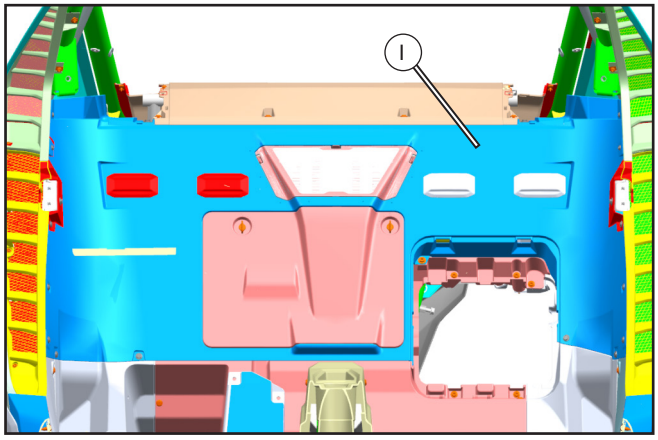

// Remove the rear plate plastic part (I).

ASSEMBLY and INSTALLATION

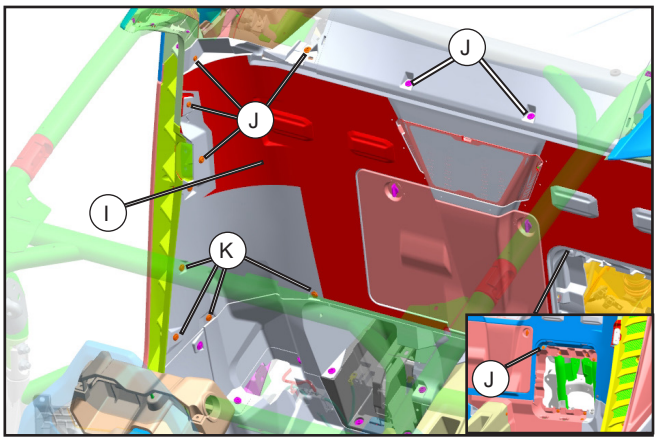

// Remove all screws (J) and plastic clasps (K). Then remove the rear plate plastic part (I).

- Note that the screws (J) and plastic clasps (K) here share the same removal method as the right side.

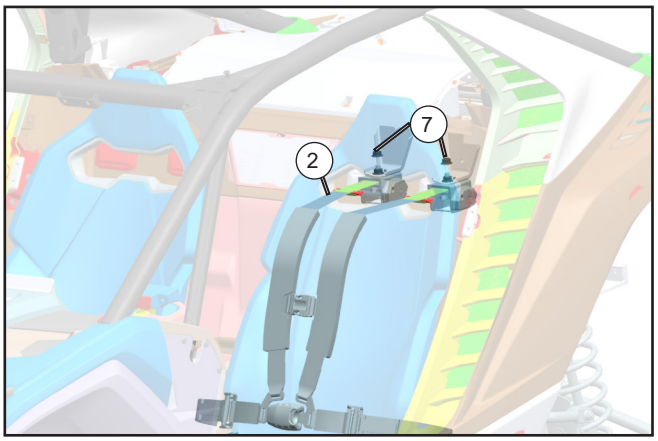

// Pass the four-point driver seat belt assembly (2) through the space below the seat headrest and the reserved mounting hole of the rear plate plastic part (D). Then align the retractor's upper bolt with the mounting hole of the frame assembly. Last, insert it in and finger-tighten the nuts (7).

- Note that the bolts here are all installed before tightening.

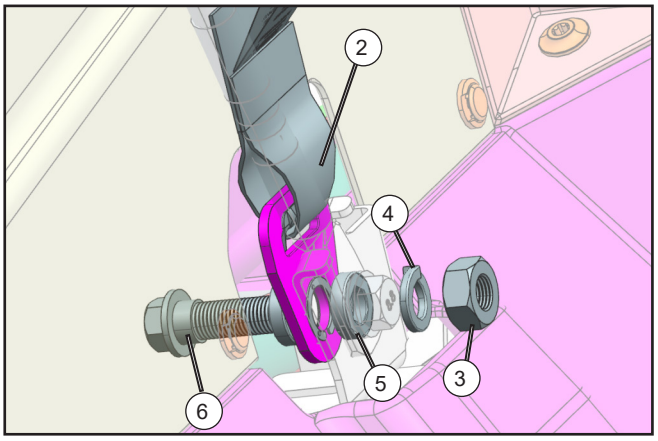

// Insert the 7/16" bolt (6) on the four-point driver seat belt assembly (2) and align it with the assembly. Then pass it through the plain washer (5), lock washer (4) and 7/16" nut (3) on the other side, and then finger-tighten them.

- Note that the bolts here are all installed before tightening.

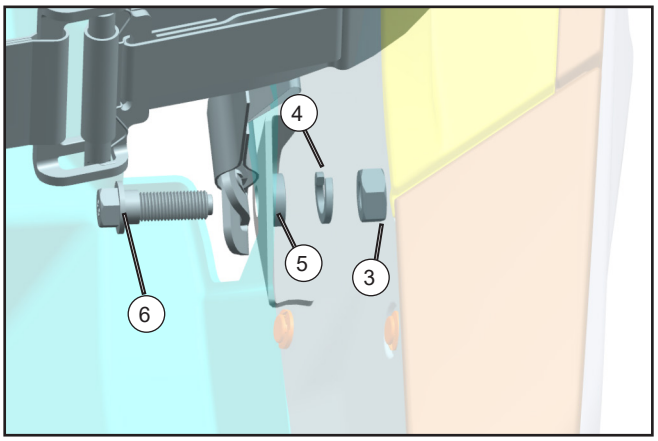

// The left side and the right side share the same method. Insert the 7/16" bolt (6) on the four-point driver seat belt assembly (2) and then align it with the assembly. Then pass it through the plain washer (5), lock wahser (4), and 7/16" nut (3) on the other side, and then finger-tighten them.

- Note that the bolts here are all installed before tightening.

ASSEMBLY and INSTALLATION

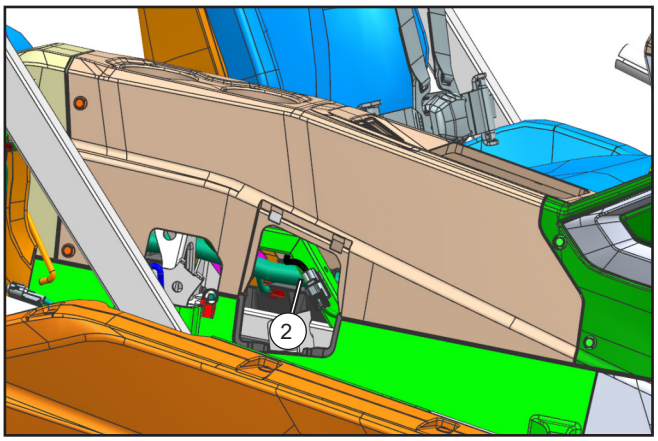

// Pass the harness from the inside of the driver seat to the side of the passenger seat maintenance port. Then, insert the interface of the four-point driver seat belt induction harness (2) from the passenger seat to the main harness interface. Adjust the seat belt to the appropriate position and secure all screws to complete the installation.

i - The installation steps of the four-point passenger seat belt assembly are the same.

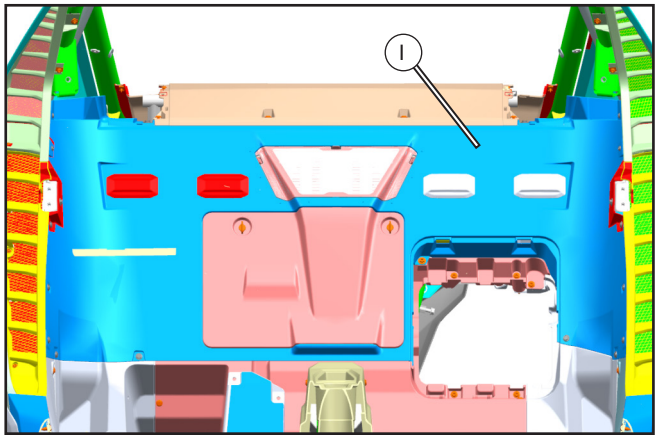

// Reinstall the bolts of the rear plate plastic part (I) in the reverse order of removal.

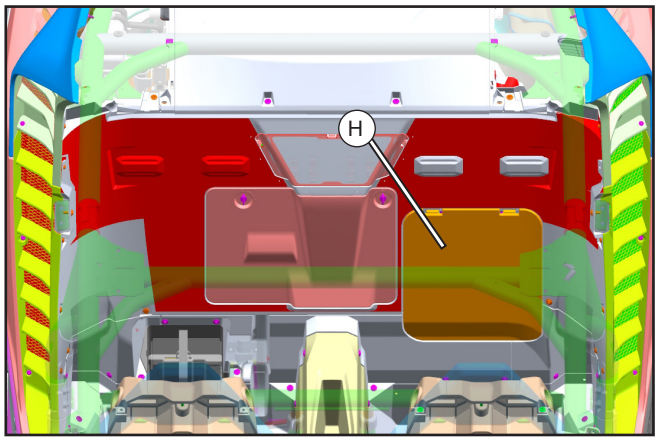

// Reinstall the service cover (H).

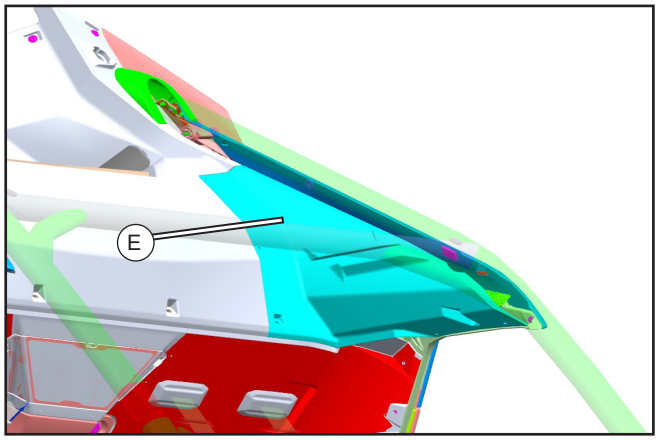

// Align the driver side blue plastic part (E) with the mounting hole and reinstall it.

i - The installation steps of the driver and passenger side plastic parts are the same.

ASSEMBLY and INSTALLATION

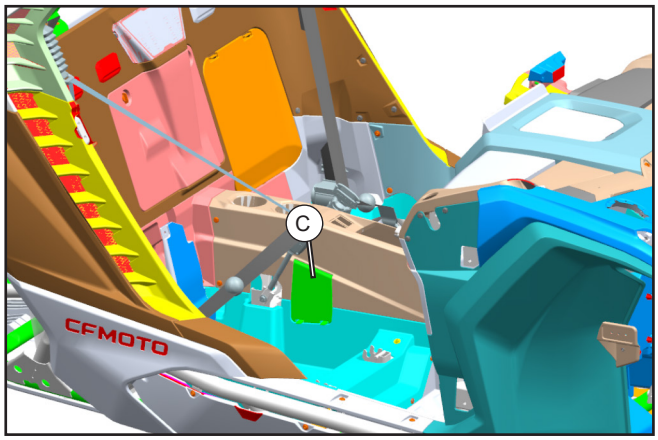

// Reinstall the passenger seat service cover (C).

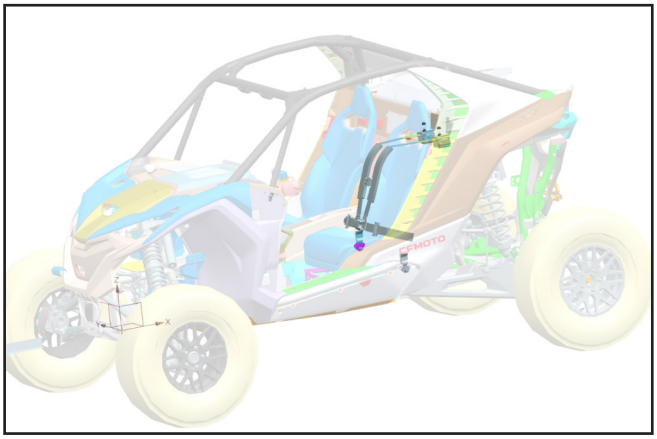

// The SINGLE-ROW FOUR-POINT DRIVER SEAT BELT ASSEMBLY is completed.