


CF1000UU 5HY0-803000 Rear tail

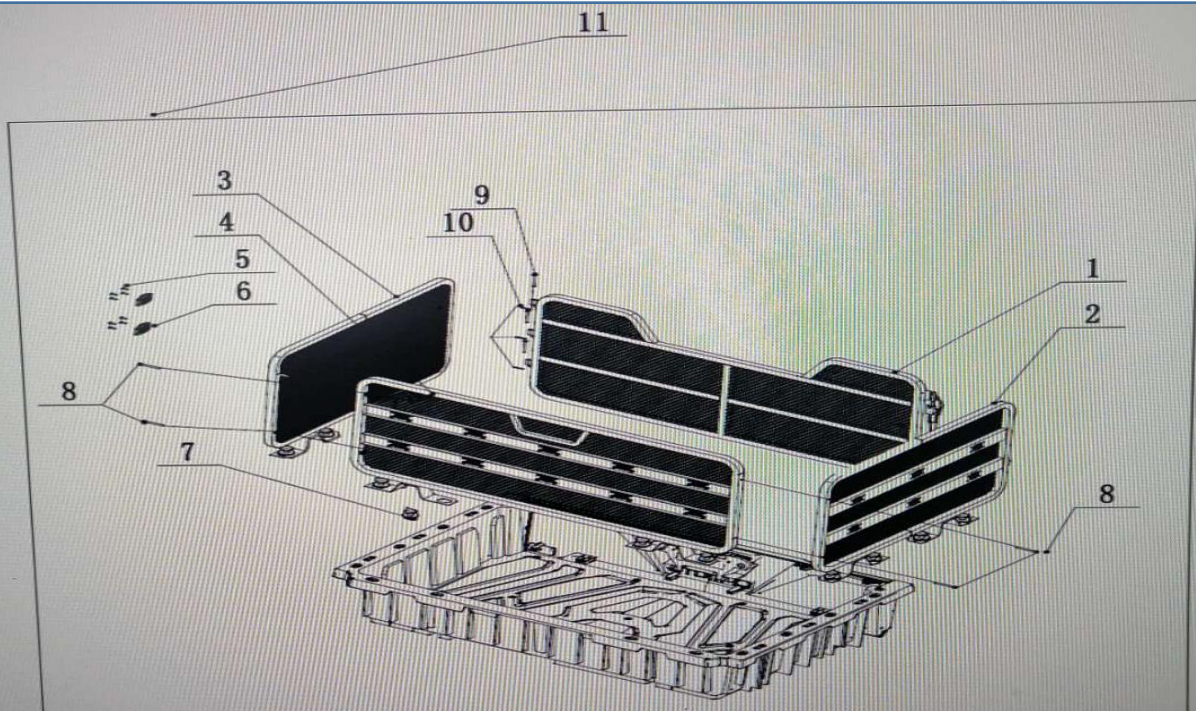



List:

- | | |
|--------------------|-------------|
| 1. Rear extension | 5HY0-803100 |
| 2. Left extension | 5HY0-803400 |
| 3. Right extension | 5HY0-803500 |
| 4. Front extension | 5HY0-803300 |
| 5. Bolt M6x16 | GB/T819 |
| 6. Quick release | 5HY0-806000 |
| 7. Quick release | 9AWA-801200 |
| 8. Bolt M10x75 | GB/T5789 |
| 9. Pin | 5HY0-802006 |
| 10. Lockpin | QC/T623 |
| 11. Rear tail | 5HY0-803000 |



Step one

Put the front extension at the front of the cargo box, then finish the installation by using 4pcs quick releases.



Step two
Put the right extension with bolt pre locked (do not screw in), then use the quick releases.



Step three
Put the left extension with bolt pre locked (do not screw in), then use the quick releases



Step four

Put the rear extension with the pre lock in the card slot, then use thread pin shaft and lock the pin.



Step five

Screw in the fasten bolts in turn after finishing the above steps.