

## ACCESSORY SETUP INSTRUCTION

### NERF BARS ASSY -- PN 9DRV-802400-3000

VALID FOR: CFORCE 500 & 500 TOURING

**BEFORE YOU BEGIN:** Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

**NOTE:** CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

**Zhejiang CFMOTO Power Co., Ltd.** All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

## MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.


## PARTS LIST:

| ITEM | PART NAME             | PART NUMBER         | QTY. | REMARK                                   |
|------|-----------------------|---------------------|------|--|
| 1    | NERF BARS ASSY        | 9DRV-802400-3000    | 1    | Picture is for structure reference only. |
| 2    | MIDDLE NERF BARS ASSY | 9DRV-802410-3000    | 1    |  |
| 3    | LH NERF BARS ASSY     | 9DRV-802420-3000    | 1    |  |
| 4    | RH NERF BARS ASSY     | 9DRV-802430-3000    | 1    |  |
| 5    | SCREW M6×20           | 9DRV-802200-3000-20 | 4    |  |
| 6    | SCREW M6×40           | 9DRV-802200-3000-21 | 2    |  |
| 7    | BUSHING               | 9DRV-802200-3000-22 | 2    |  |
| 8    | SELF LOCK NUT M6      | 9DRV-802200-3000-23 | 4    |  |

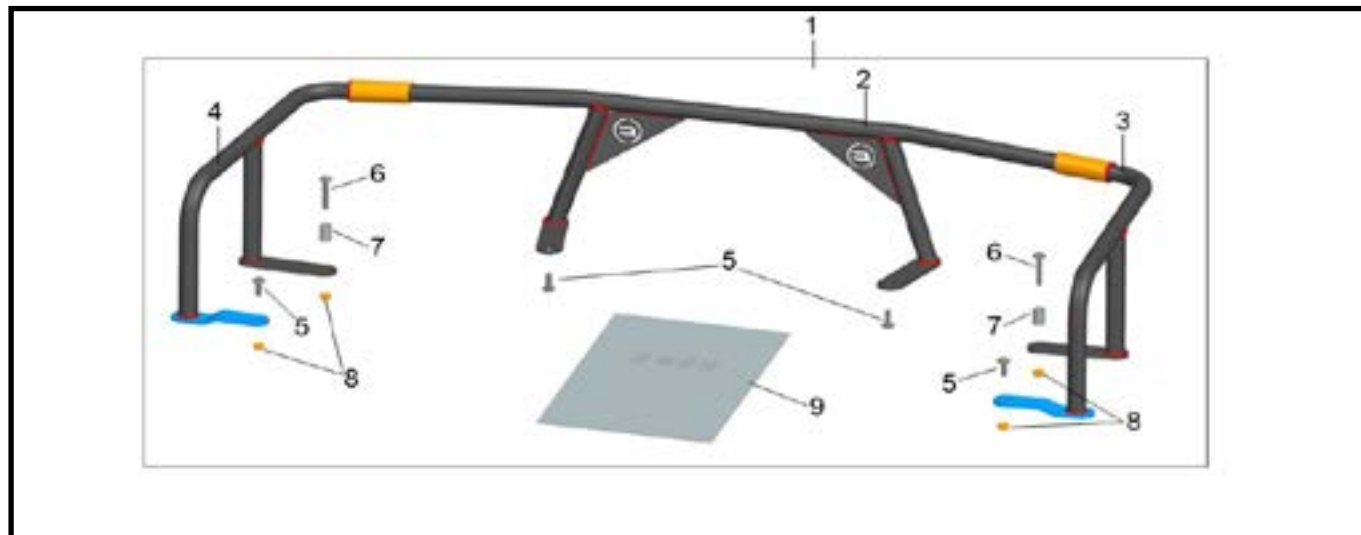


## TOOL LIST:

| ITEM | DESCRIPTION          | QTY. | REMARK             |
|------|----------------------|------|--------------------|
| 1    | PROTECTIVE GLOVES    | 1    | Recommended tools. |
| 2    | 10mm OPEN END WRENCH | 1    |                    |
| 3    | 5mm ALLEN WRENCH     | 1    |                    |
| 4    | 6mm ALLEN WRENCH     | 1    |                    |

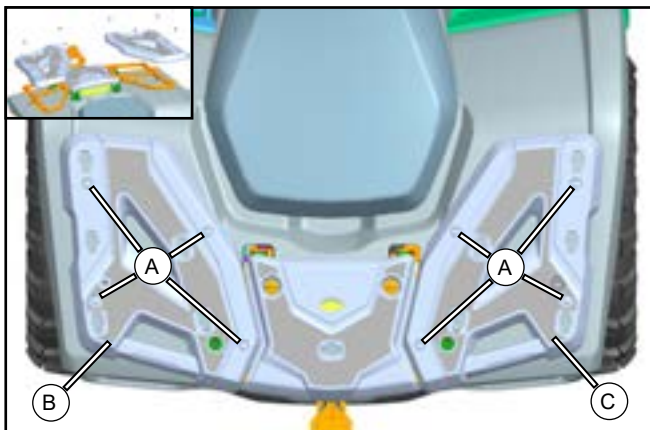


// Unscrew the screws (A), then remove the covers (B,C).

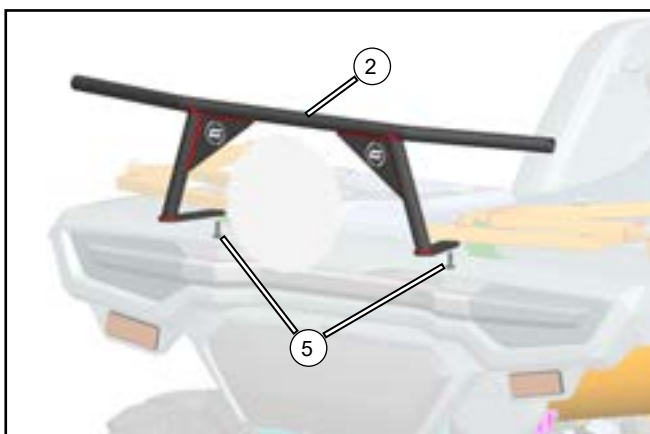

// Install the middle nerf bars (2) with screws (5). Do not fully tighten at this time.




// As shown in the picture, connect the right nerf bars (4) with the middle nerf bars (2).

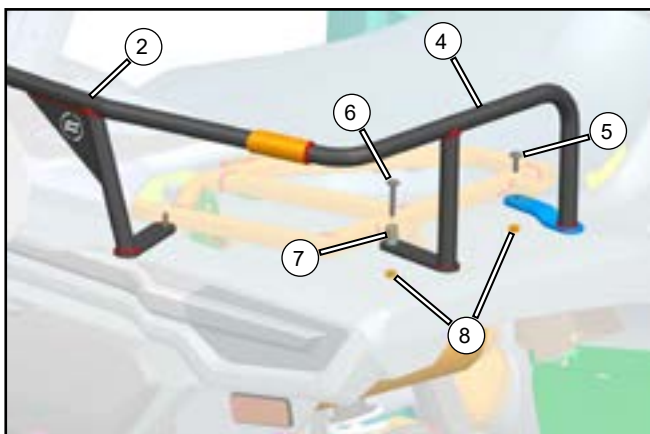

// Put the bushing (7) in the right position shown in the picture, secure the right nerf bars (4) with screws (5,6) and self lock nuts (8). Do not fully tighten at this time.


## ASSEMBLY and INSTALLATION

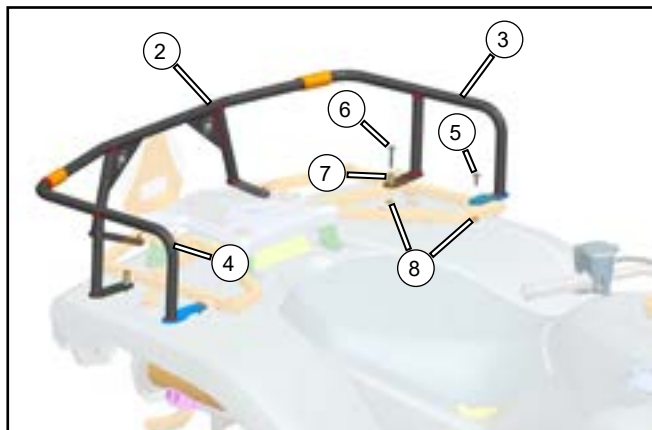

// The installation method of left nerf bars (3) is the same as that of right nerf bars (4).




// Tighten all screws (5,6) and self lock nuts (8) with allen wrench and open-ended wrench.

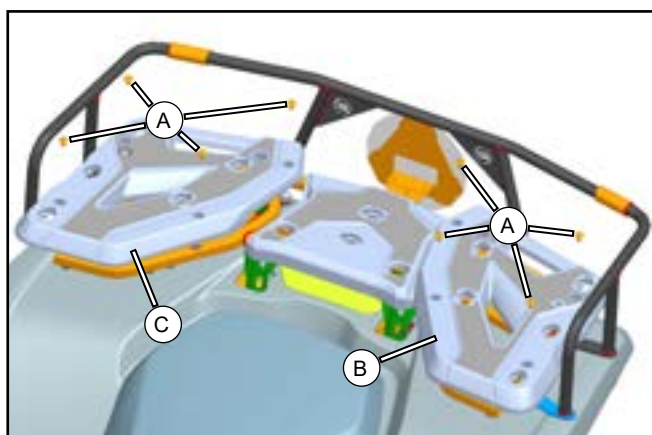

// Reinstall the covers (B,C) with the screws (A), then tighten the screws.

**i** » Installation steps above are for rear nerf bars on CFORCE 500 & 500 TOURING, the front nerf bars are installed in the same way.

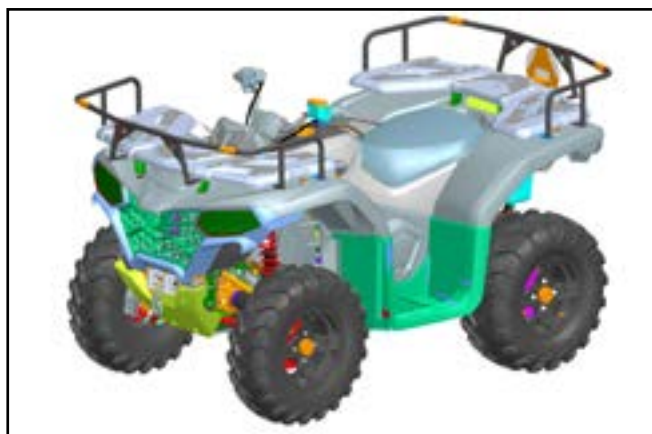

// The nerf bars are assembled.