



ACCESSORY SETUP INSTRUCTION

SIDE BUMPER ASSY. -- PN 5BWV-801300-5000

VALID FOR: MY2022 and Newer ZFORCE 800 Trail

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.

PARTS LIST:


ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	SIDE BUMPER ASSY.	5BWV-801300-5000	1	
2	SIDE BUMPER, LH	5BWV-801330-5000	1	
3	SIDE BUMPER, RH	5BWV-801340-5000	1	
4	INNER HEX SCREW M8×30	30102-080030870	2	
5	HEX FLANGE BOLT M8×30	30006-080030870	4	
6	WASHER M8	30300-080142	2	
7	DECO PLUG	5BY#-801302-1000	2	
8	φ35 DRILLING BIT	5BWV-801300-5000-20	1	
9	PLUG	5BWV-801100-5000-21	6	Pre-installed

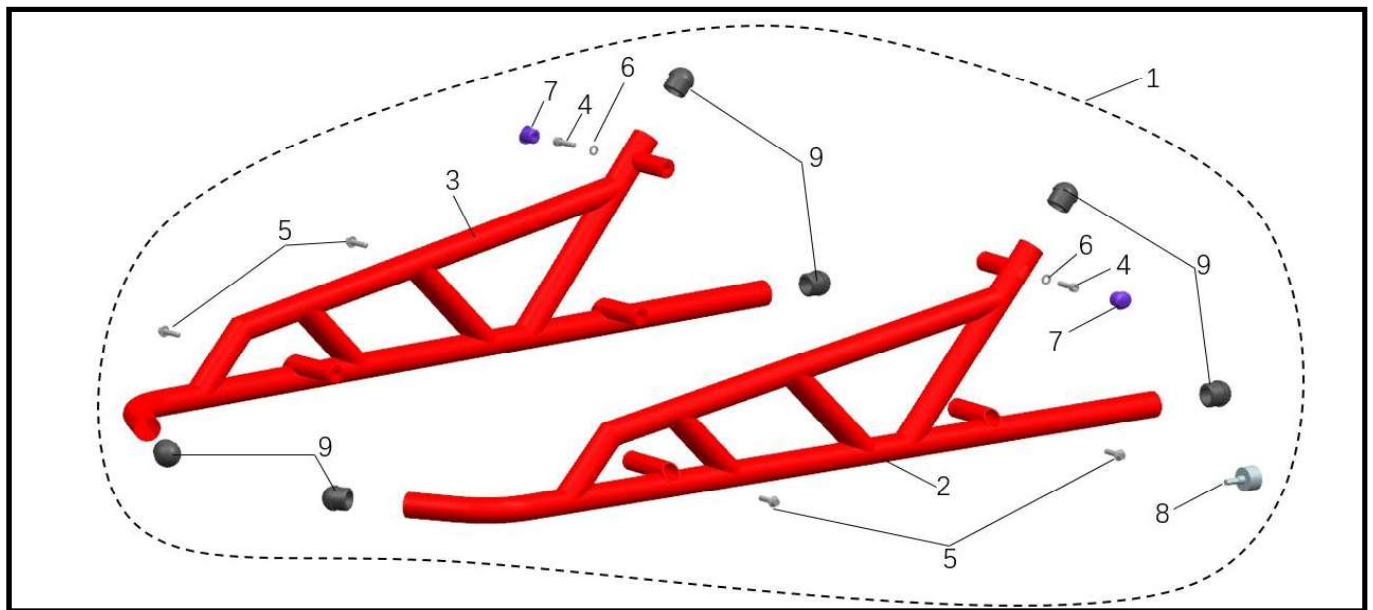

TOOL LIST:

ITEM	DESCRIPTION	QTY.	REMARK
1	PROTECTIVE GLOVES	1	Recommended tools
2	ALLEN KEY 6mm	1	
3	ELECTRIC DRILL	1	
4	SOCKET 10mm	1	

ASSEMBLY and INSTALLATION

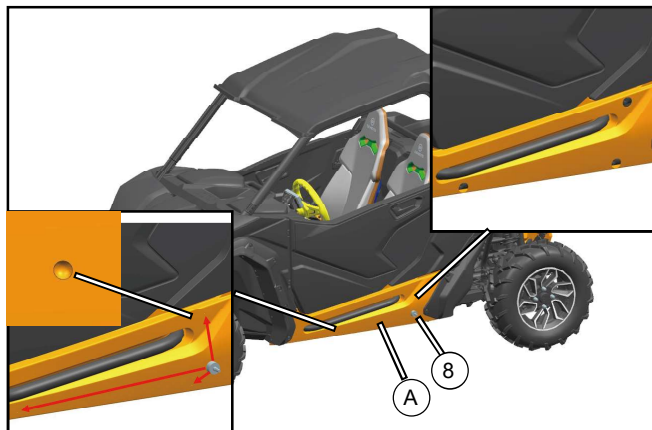


// Install ϕ 35 bit (8) on an electric drill. Drill holes at the three position points molded into the guard plates (A) on each side of the vehicle to expose the threaded mounting holes on the frame.



-Left guard plate shown. Right guard plate is drilled in the same method.

-Drill the guard plate plastic layer only. Do not drill into the frame.

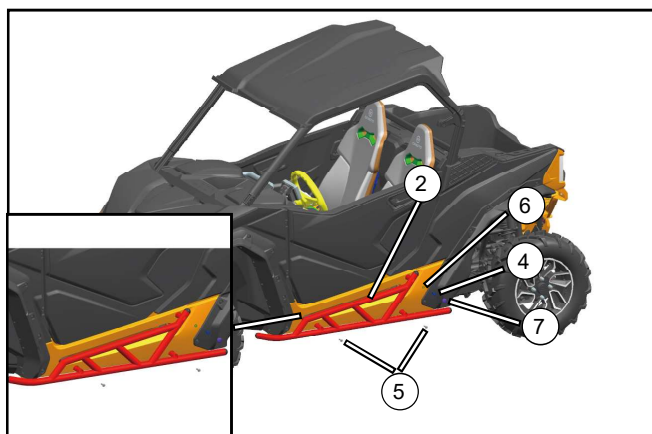

// Place the side bumper (2) at the assembly position. Install bolts (5) at the lower mounting points, but do not tighten directly. Place washer M8 (6) onto screw (4) and install it on the upper mounting point. Tighten all side bumper fasteners securely, then install deco plug (7) on screw (4) of the upper mounting point.



-Left side shown. Right side is assembled in the same method.



// Assembly is complete.