

ACCESSORY SETUP INSTRUCTION

SIDE DOOR STORAGE BAG ASSY -- PN : 5BYV-806500-1000

VALID FOR: ZFORCE 950 & ZFORCE 1000

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS



- Indicates information with more details or tips.



- Indicate information of warning or danger.

PARTS LIST:

ITEM	PART NAME	PART NUMBER	QTY.	REMARK
1	STROAGE BAG, LH SIDE DOOR	5BYV-806510-1000	1	For structure reference only
2	STROAGE BAG, RH SIDE DOOR	5BYV-806520-1000	1	
3	SIDE DOOR STROAGE BAG ASSY	5BYV-806500-1000	1	



ASSEMBLY and INSTALLATION




// Press the door lock (A) to open the LH side door.



// Put the storage bag, LH side door (1) at the preassembly position of the LH side door (A).



// Install the plastic buckles (A) of the LH side door soft bag onto the pipe (B).

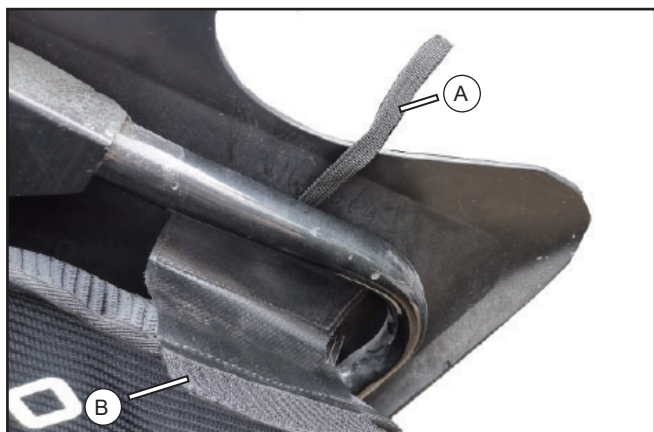

// Put the strap (A) on the storage bag Hook & Loop (B) through the LH side door pipe, then stick with the Hook & Loop (B).

- i**
- There are 5 places to be stuck.
 - The storage bag, RH side door is assembled in the same methods.



// The side door storage bag assy assembly is complete.