

ACCESSORY SETUP INSTRUCTION

FRONT WINDSHIELD ASSEMBLY -- PN: 5DYV-805100-1001

VALID FOR: Z10&Z10-4

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface, put the transmission gear into Park (P) and turn off the key switch.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.

PARTS LIST:


ITEM	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	Front windshield assembly	5DYV-805100-1001	1	For structure reference only
2	Front windshield	5DYV-805101-1000	1	
3	Inner hex bolt M6×25	5DYV-805100-1000-20	3	
4	Driver side of the tape clip	5DYV-805102-1000	1	
5	Passenger side of the tape clip	5DYV-805103-1000	1	
6	Rubber sleeve	6KJ0-120004	3	
7	Cap nut M6	5DYV-805100-1000-21	3	
8	Round clamp	5DYV-805110-1000	4	
9	Threadlocker	5DYV-805100-1000-23	1	
10	Hexagon key T25	5DYV-805100-1000-22	1	
11	Rubber sleeve bushing	5020-031002	3	
12	Fender upper service cover	5GY0-042081-1000	1	

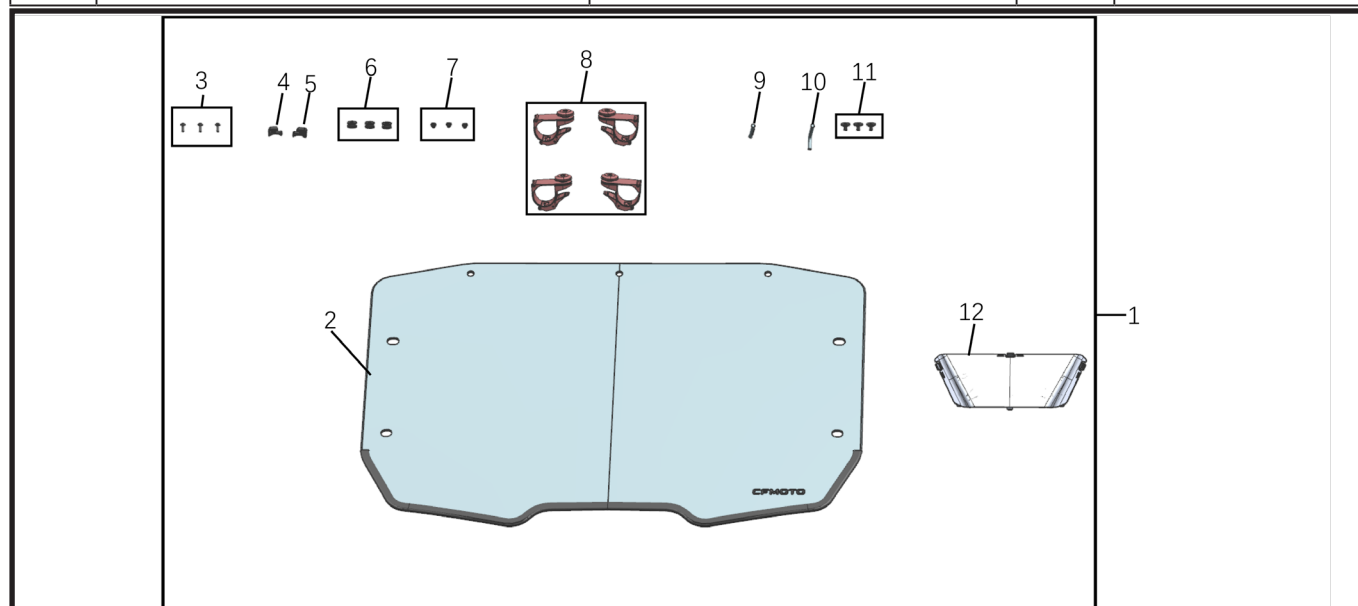

TOOL LIST:


ITEM	DESCRIPTION	QTY.	DESCRIPTION
1	Protective gloves	1	Recommended tools, which are not included in the package.
2	Hexagon key s=5	1	

ASSEMBLY AND INSTALLATION

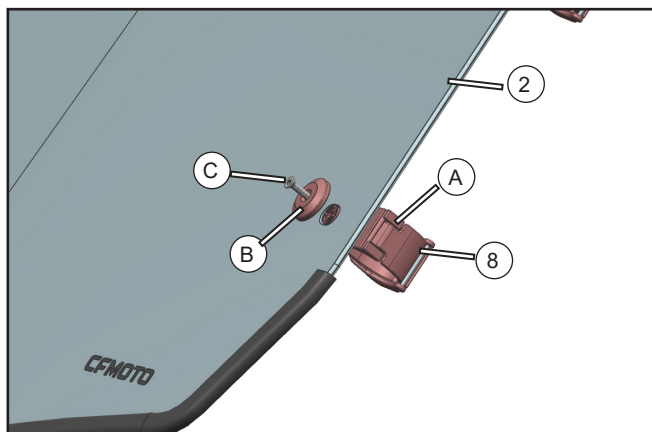


// Remove the plastic film from the front windshield (2) surface and place it on the operation table. Place the clamp (A) into the front windshield, and then assemble and finger-tighten the press cover (B) and screw (C).


i Apply the treadlocker.

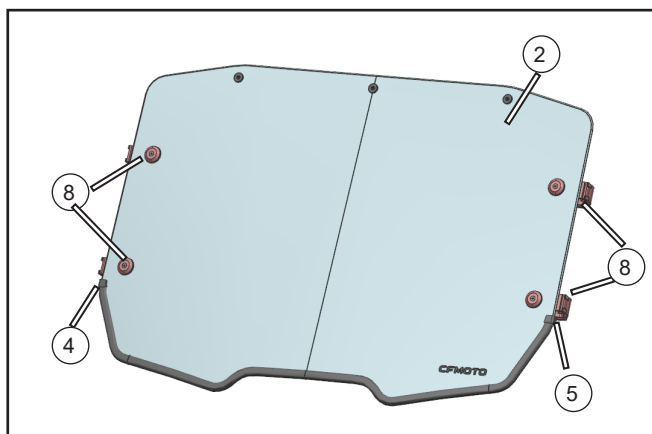

// After four round clamps (8) are installed, buckle the driver side of the tape clip (4) and the passenger side of the tape clip (5) into the end of the windshield tape.

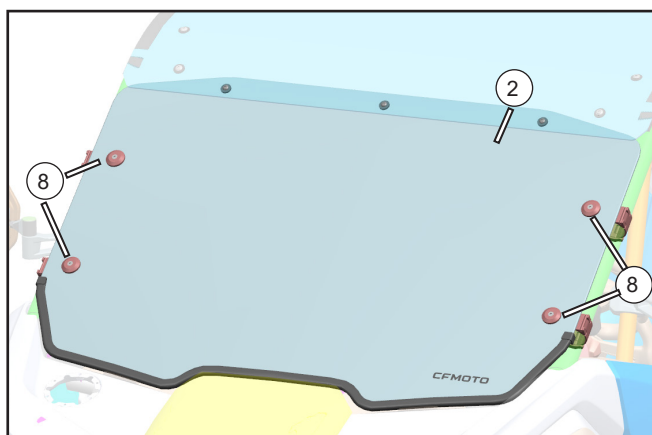


// Place the front windshield (2) into assembly position, buckle and finger-tighten four clamps (8).

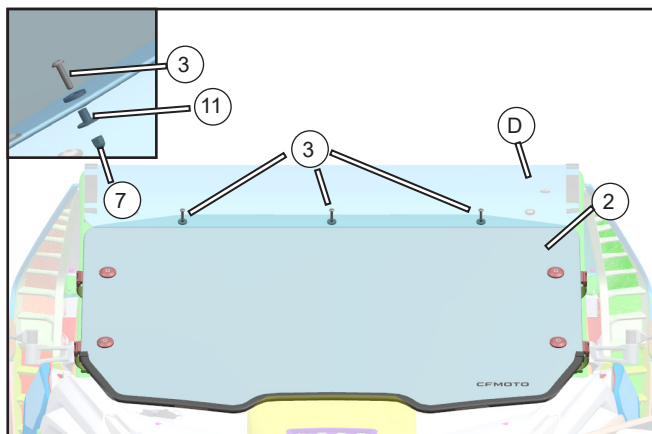

// Tighten the front windshield (2) and aluminum top roof (D) with inner hex bolts M6 × 25 (3), rubber sleeve bushing (11) and cap nut (7), and then tighten four round clamps (8).


i The front windshield must be fitted with the aluminum top roof. Insert the rubber sleeve bushing (11) into the rubber sleeve on the windshield from inside, and press the cap nut (7) on the rubber sleeve bushing and tighten it.

ASSEMBLY AND INSTALLATION

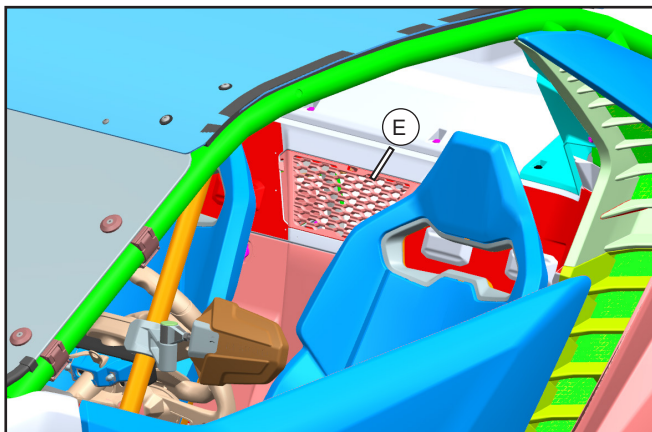

// Remove the original fender upper service cover (E).


i - This part must be removed and replaced when installing the front windshield.

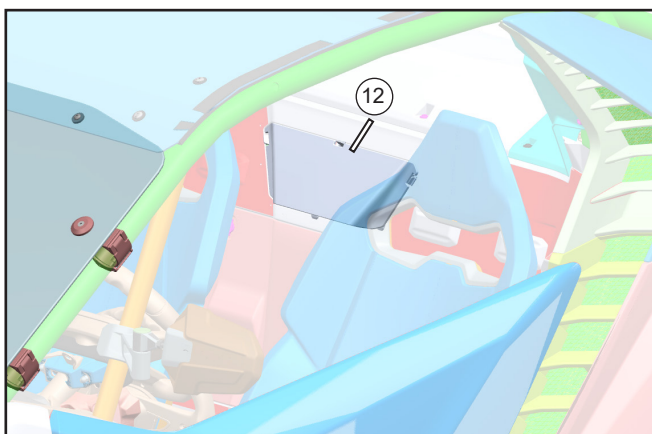

// Install the fender upper service cover (12).

i - The fender upper service cover (12) must be installed before installing the front windshield, and close the vent here.

! - If the fender upper service cover (12) isn't installed before installing the front windshield, the vehicle's cooling performance will be affected.

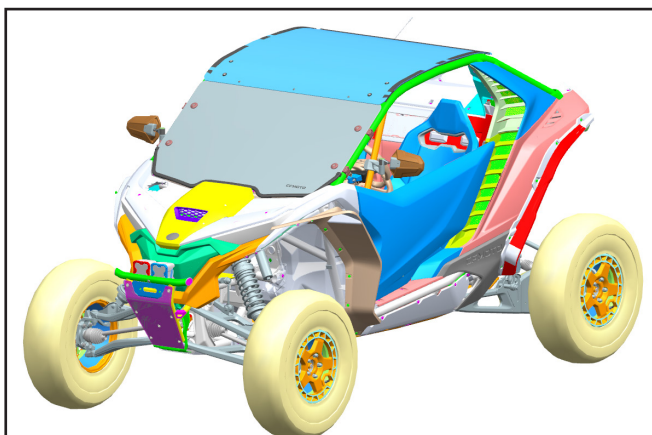

The assembly of the FRONT WINDSHIELD ASSEMBLY is completed.