

ASSEMBLY INSTRUCTIONS

PLOW MOUNT U10 PRO


CFMOTO

CLIENT N° : 4SOU-400000-4005

WARNING (in order to prevent injuries to yourself and others):

- Please read this guide carefully, and your vehicle's manual.
- Always wear a helmet, safety glasses, and safety shoes while driving your vehicle.
- Keep an appropriate distance with any individuals or vehicles while driving.

Exploded view

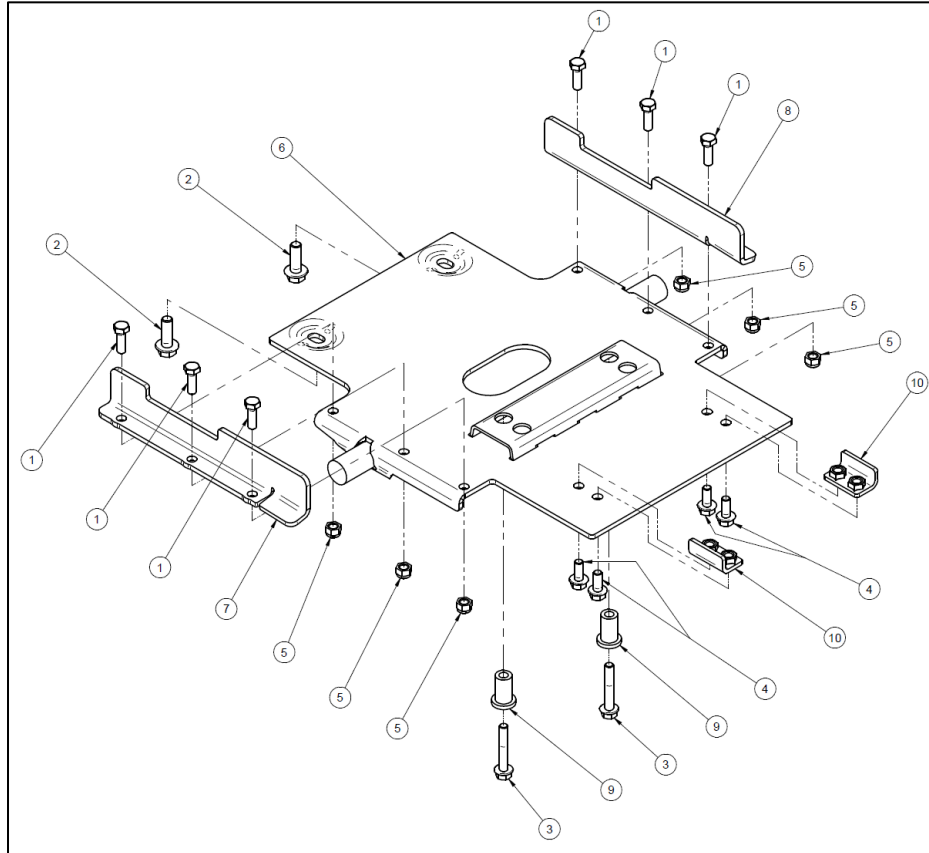

Parts list

REF.	DESCRIPTION	QTY
1	Hexagonal bolt M8 x 25	6
2	Hexagonal flange bolt M10 x 30	2
3	Hexagonal flange bolt M8 x 50	2
4	Hexagonal flange bolt M8 x 20	4
5	Hexagonal nylon nut M8	6
6	Main plate	1
7	Side plate 1	1
8	Side plate 2	1
9	Bushing	2
10	Rear plate	2

ASSEMBLY INSTRUCTIONS


PLOW MOUNT U10 PRO

CFMOTO


CLIENT N° : 4SOU-400000-4005

1. Installation


- 1.1. Remove front skid plate. The skid plate and hardware will not be reused.

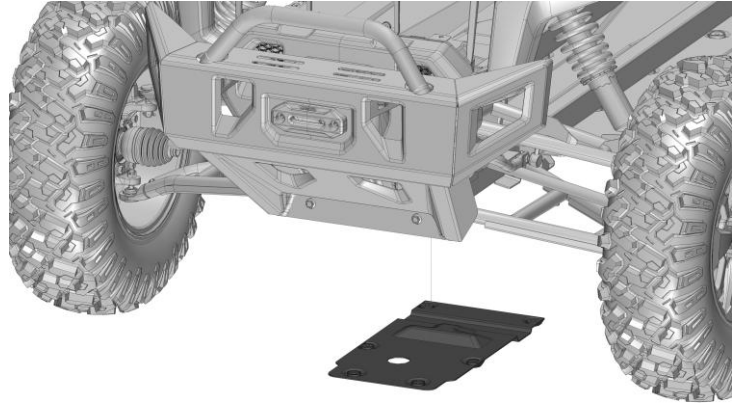

- 1.2. Remove the 2x bolts indicated on the picture. These bolts will not be reused.

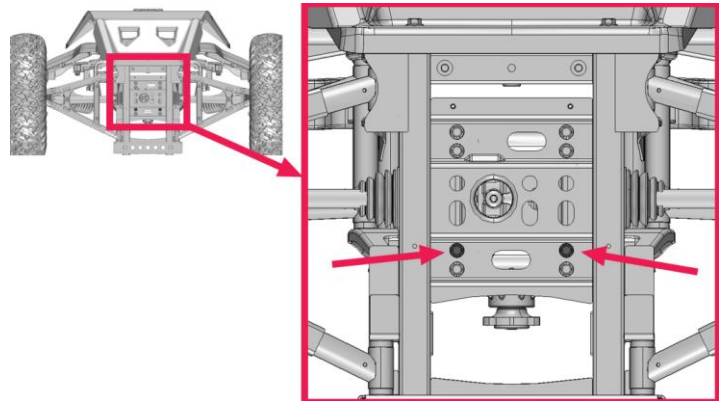

- 1.3. Install the rear plate [10] on the main plate [6] using 4x bolts [4]. Hand tighten only.

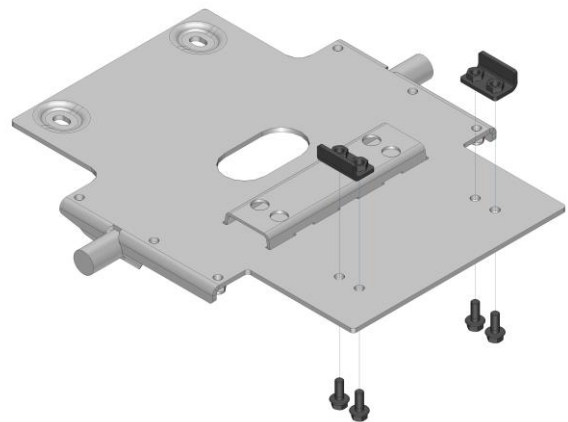


ASSEMBLY INSTRUCTIONS

PLOW MOUNT U10 PRO


CFMOTO

CLIENT N° : 4SOU-400000-4005


- 1.4. Install the main plate [6] on the vehicle using the 2x bolts [2]. Hand tighten only.

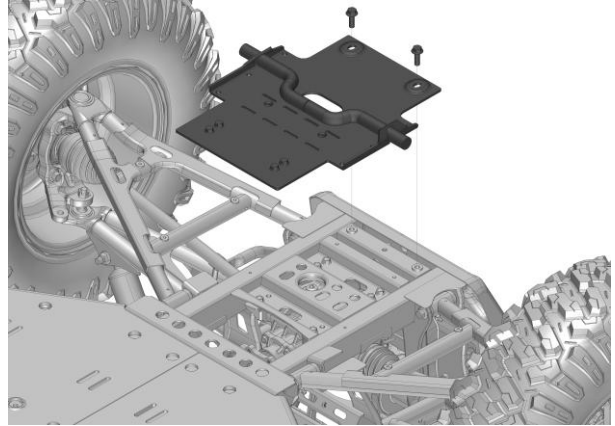

- 1.5. Install the 2x bushing [9] and the 2x bolt [3]. The bolts [3] will replace the bolts removed at step 1.3. Make sure the threads are engaged correctly before tightening the bolts.

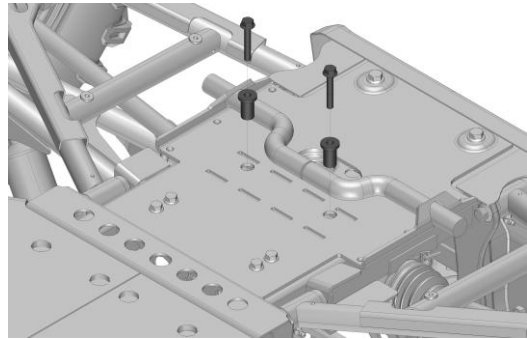


- 1.6. Tight all the bolts installed previously.

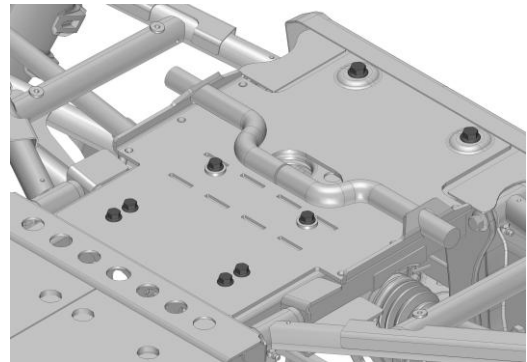

- 1.7. Install the side plate 1 [7] using 3x bolts [1] and 3x nuts [5].

- 1.8. Repeat step 1.7 on the other side for the side plate [8].

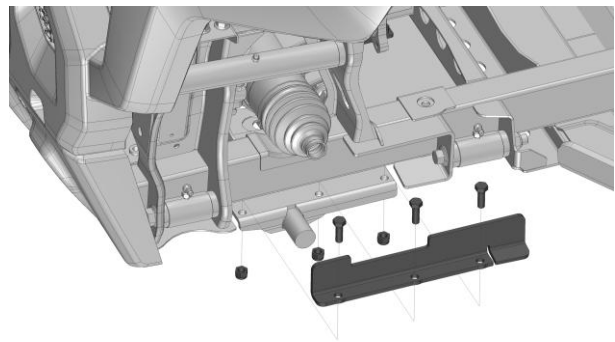

INSTRUCTION D'ASSEMBLAGE

PLAQUE ATTACHE U10 PRO


CFMOTO

N° CLIENT : 4SOU-400000-4005

AVERTISSEMENT (afin d'éviter des blessures aux autres et à vous-même) :

- Lire ce feuillet en entier, ainsi que le manuel de votre véhicule.
- Toujours porter un casque, des lunettes de sécurité et des chaussures de protection appropriées lors de l'utilisation de votre véhicule.
- Garder une distance appropriée avec toutes personnes ou tous véhicules lorsque vous êtes en mouvement.

Vue explosée

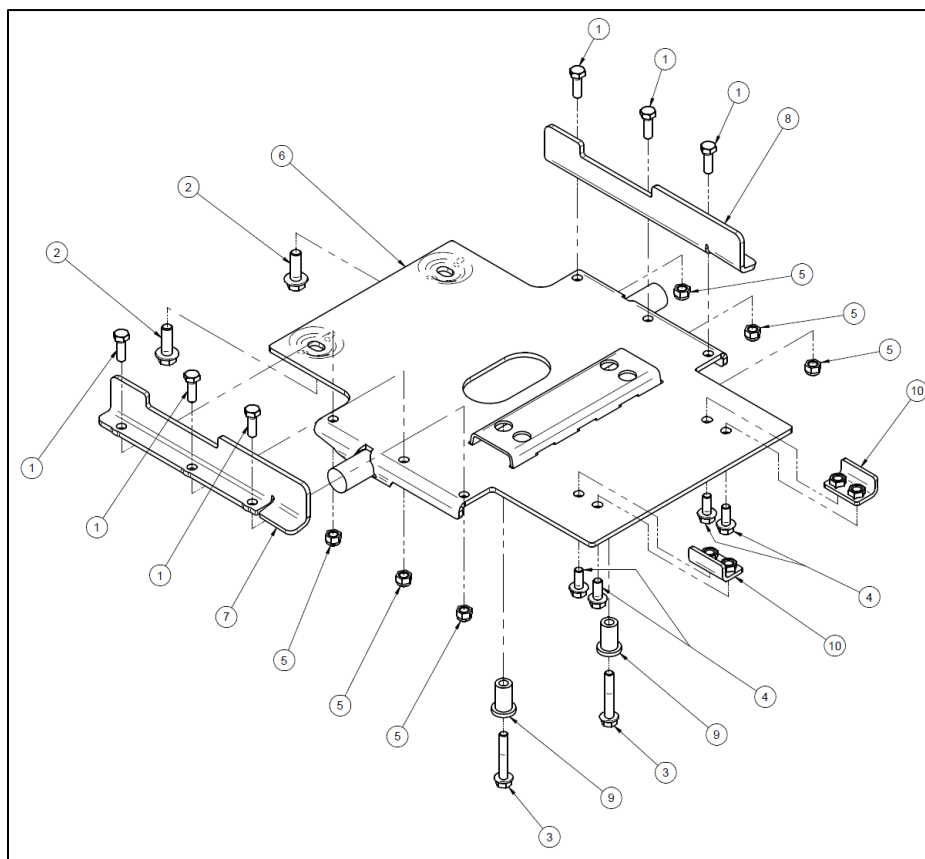

Liste de pièces

RÉF.	DESCRIPTION	QTÉ
1	Boulon hexagonal M8 x 25	6
2	Boulon hexagonal à épaulement M10 x 30	2
3	Boulon hexagonal à épaulement M8 x 50	2
4	Boulon hexagonal à épaulement M8 x 20	4
5	Écrou hexagonal nylon M8	6
6	Plaque principale	1
7	Plaque de côté 1	1
8	Plaque de côté 2	1
9	Bague	2
10	Plaque arrière	2

INSTRUCTION D'ASSEMBLAGE


PLAQUE ATTACHE U10 PRO

CFMOTO


N° CLIENT : 4SOU-400000-4005

1. Installation


- 1.1. Enlever la plaque protectrice avant. La pièce ne sera pas réutilisée.

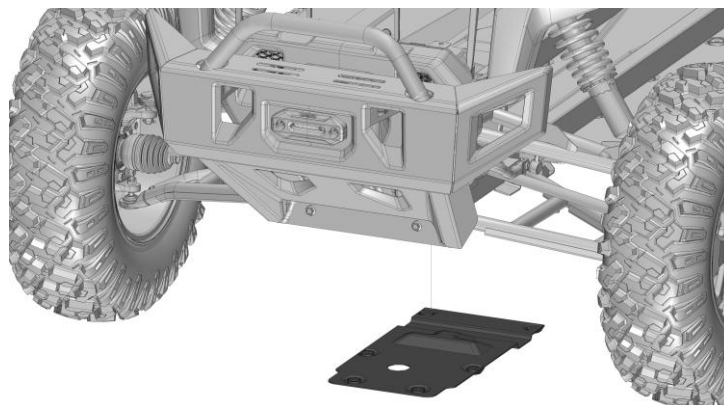

- 1.2. Enlever les 2x boulons indiqués sur l'image. Ces boulons ne seront pas réutilisés.

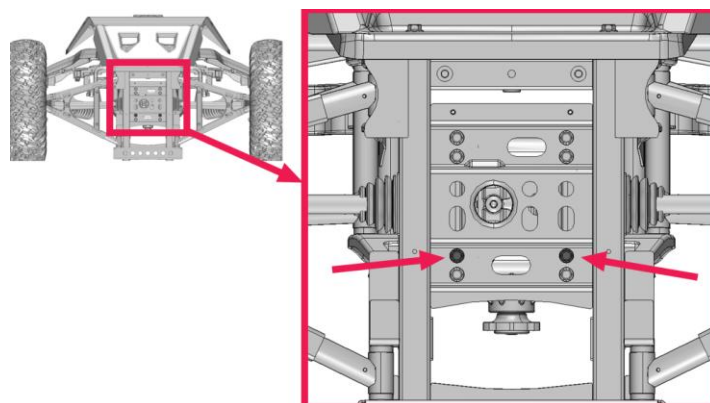

- 1.3. Installer les plaques arrière [10] sur la plaque principale [6] avec les 4x boulons [4]. Serrage à la main seulement.

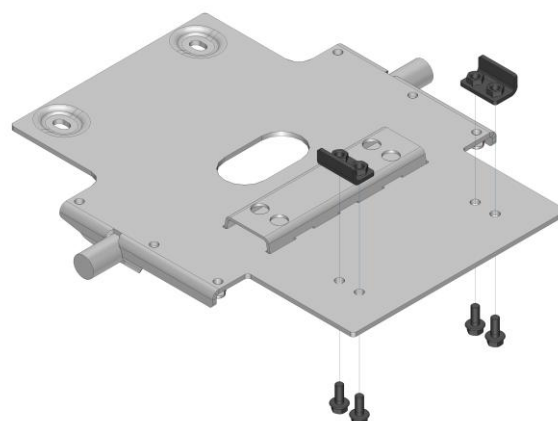


INSTRUCTION D'ASSEMBLAGE

PLAQUE ATTACHE U10 PRO


CFMOTO

N° CLIENT : 4SOU-400000-4005


- 1.4. Installer la plaque principale [6] sur le véhicule avec 2x boulons [2]. Serrage à la main seulement.

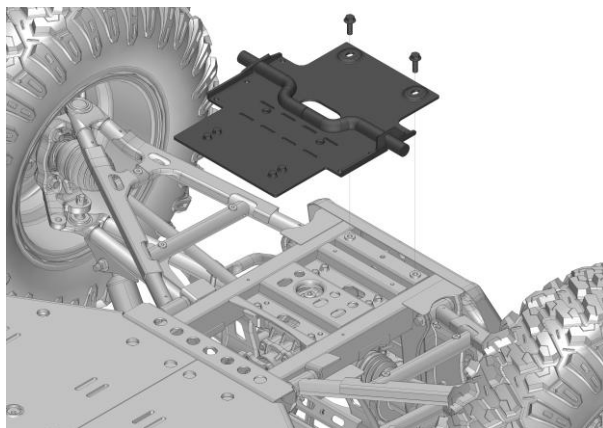

- 1.5. Installer les 2x bagues [9] et les 2x boulons [3]. Les boulons [3] remplaceront les boulons enlevés à l'étape 1.3. Assurez vous que les filets soient bien engagés avant de serrer les boulons.

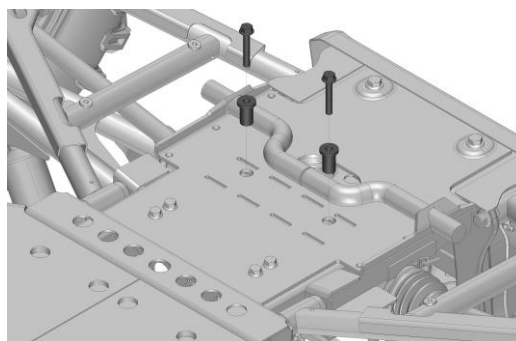

- 1.6. Serrer tous les boulons installés avant.

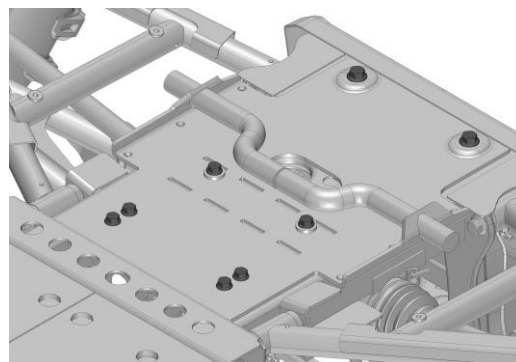

- 1.7. Installer la plaque de côté [7] avec 3x boulons [1] et 3x écrous [5].

- 1.8. Répéter l'étape 1.7 de l'autre côté en utilisant la plaque de côté [8].

