

ACCESSORY SETUP INSTRUCTIONS

HIGHTENED SEAT ASSY, LOW SEAT ASSY PN: 6GUV-806100-5600, 6GUV-806200-5601

VALID FOR: CF650-10

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.


MEANING OF SYMBOLS

i - Indicates information with more details or tips.

! - Indicates information of warning or danger.

PART LIST:


S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	HIGHTENED SEAT	6GUV-806100-5600	1	Picture is for structure reference only.
2	LOW SEAT	6GUV-806200-5601	1	

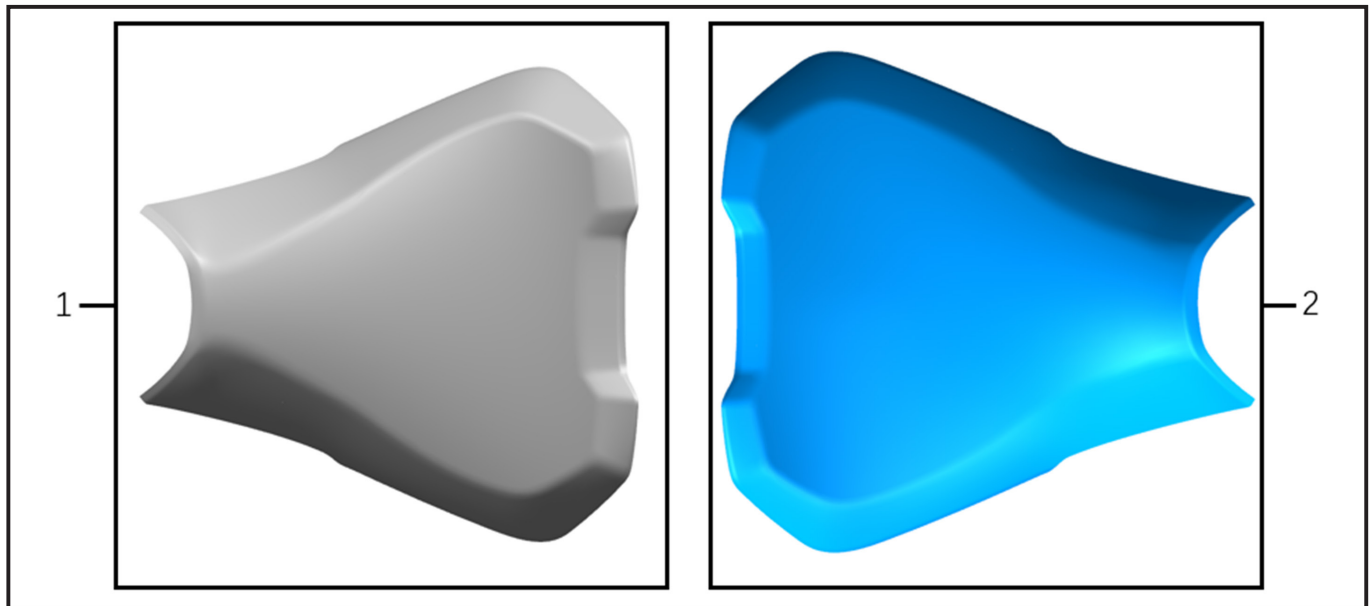


TOOL LIST:

ITEM	DESCRIPTION	REMARK
1	s=5, INNER HEX WRENCH	Recommended Tools
2	PROTECTIVE GLOVES	


WORK

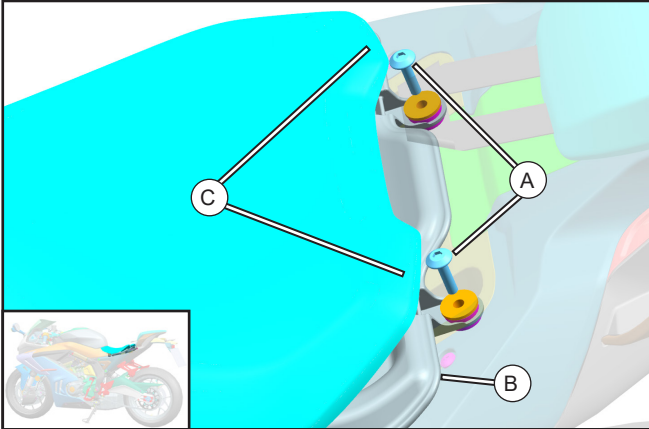


- // Lift up the rear ends (C) of the original seat (B).
- // Unscrew two original screws M6 (A) and remove the original seat (B).

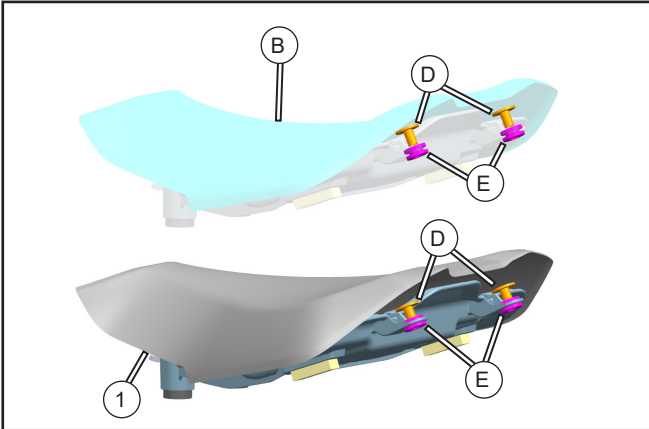

- // Remove four bushings (D,E) from the original seat(B).
- // Reinstall four bushings (D,E) in the corresponding positions of the hightened seat (1) as shown.

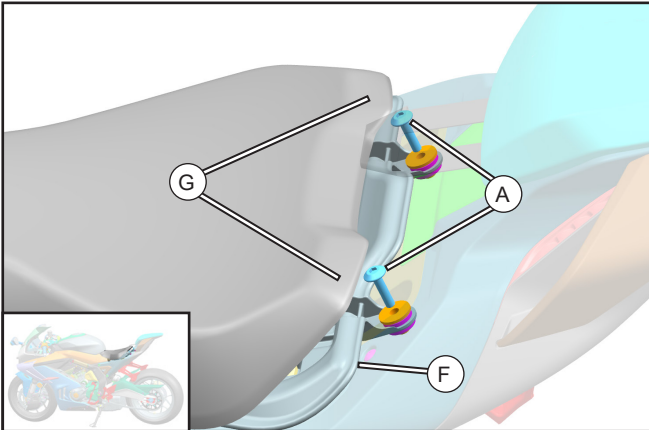

- // Place the hightened seat (F) on the corresponding position as shown.
- // Lift up the rear ends (G) of the hightened seat.
- // Pre-tighten two original screws M6 (A).
- // Fasten all screws.

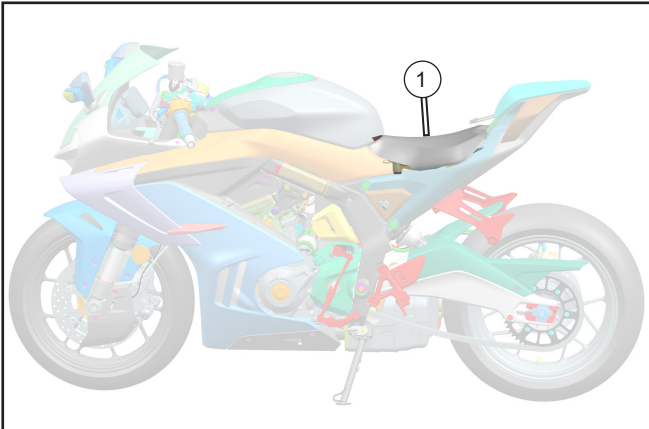

// Assembly for the hightened seat (1) is complete.

i - The low seat (2) is assembled in the same method.