

ACCESSORY SETUP INSTRUCTIONS

LH SIDE BOX ASSY_BLACK -- PN: 6GUV-224000-2000-10

LH SIDE BOX ASSY_SILVER GRAY -- PN: 6GUV-224000-2000-11

RH SIDE BOX ASSY_BLACK -- PN: 6GUV-222000-2000-10

RH SIDE BOX ASSY_SILVER GRAY -- PN: 6GUV-222000-2000-11

VALID FOR: CF400-8, CF700-9, CF800-5, CF800-11, CF900-2

The side box assy_silver gray is installed in the same method.

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS



- Indicates information with more details or tips.



- Indicates information of warning or danger.

PART LIST:


S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	LH SIDE BOX ASSY_BLACK	6GUV-224000-2000-10	1	Picture is for structure reference only.
	LH SIDE BOX ASSY_SILVER GRAY	6GUV-224000-2000-11	1	
2	RH SIDE BOX ASSY_BLACK	6GUV-222000-2000-10	1	
	RH SIDE BOX ASSY_SILVER GRAY	6GUV-222000-2000-11	1	




TOOL LIST:

ITEM	DESCRIPTION	REMARK
1	PROTECTIVE GLOVES	Recommend Tools

WORK

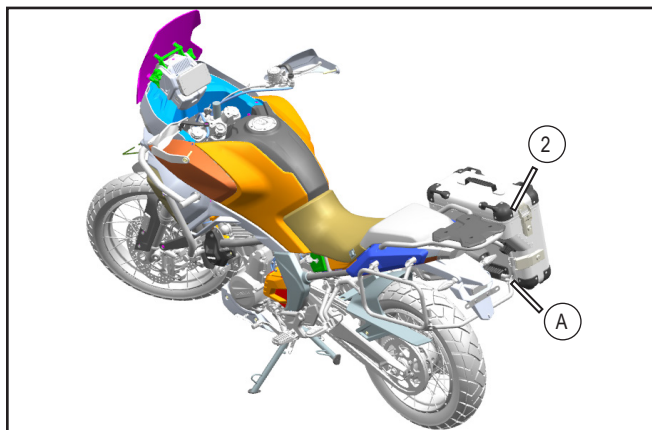


// Install RH side box assembly_black (2) into side box bracket (A)

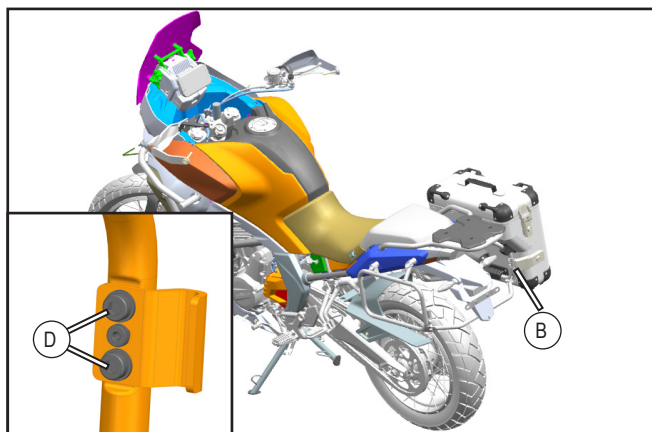


// Fasten the lock (B) with the latch bracket and lock it with the key.

i - Make sure the lock is fully locked. If the lock is too tight or too loose, loosen screws (D) and adjust the locking bracket position. After adjustment, tighten screws (D) fully installed.

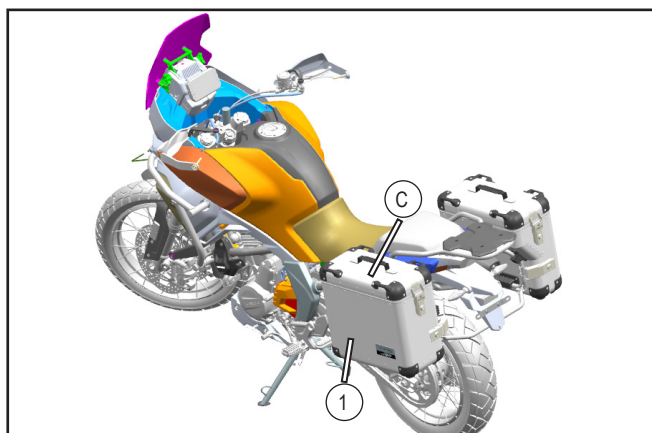

// Install the LH side box assembly_black (1) into the side box bracket (C).

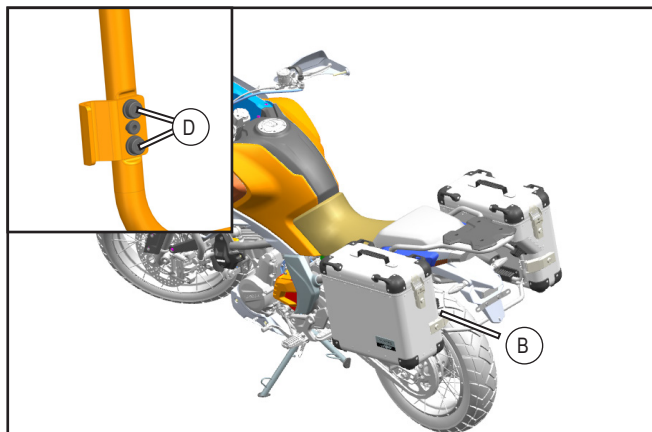

// Fasten the lock (B) with the latch bracket and lock it with the key.

// Assembly is complete.

i - Make sure the lock is fully engaged, if the lock is too tight or too loose, loosen the screw (D) and adjust the locking bracket position. After adjustment, tighten screw (D) fully installed.