

ACCESSORY SETUP INSTRUCTIONS

TAIL BOX ASSY_BLACK -- PN: 6GUV-223000-2000-10

TAIL BOX ASSY_SILVER GRAY -- PN: 6GUV-223000-2000-11

VALID FOR: CF400-8, CF700-9, CF800-5, CF800-11, CF900-2

The tail box assy_silver gray is installed in the same method.

BEFORE YOU BEGIN: Read and understand the instructions before starting any work. Make sure that all parts are ready and that you have all the tools required for assembly.

NOTE: CFMOTO shall not be liable for any damage caused by incorrect assembly. CFMOTO recommends that all original accessories be assembled by an authorized CFMOTO dealer.

Before assembly, park the vehicle on a flat surface and turn off the vehicle.

Zhejiang CFMOTO Power Co., Ltd. All rights reserved. Reproduction of this document, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.

MEANING OF SYMBOLS




- Indicates information with more details or tips.



- Indicates information of warning or danger.

PART LIST:


S/N	PART NAME	PART NUMBER	QTY.	DESCRIPTION
1	TAIL BOX ASSY_BLACK	6GUV-223000-2000-10	1	Picture is for structure reference only.
	TAIL BOX ASSY_SILVER GRAY	6GUV-223000-2000-11	1	
2	TAIL BOX TRAY ASSY	6AQV-808410-6002	1	
3	FRONT SUPPORTING STEM	6WW5-140006-5000	2	
4	REAR SUPPORTING STEM	6WW5-140007-5000	4	
5	INNER HEX SUNK SCREW M8×80	6WWV-803200-5000-20	2	
6	INNER HEX SUNK SCREW M8×40	6WWV-803200-5000-21	4	
7	INNER HEX SUNK SCREW M8×60	6WWV-803200-5000-22	2	

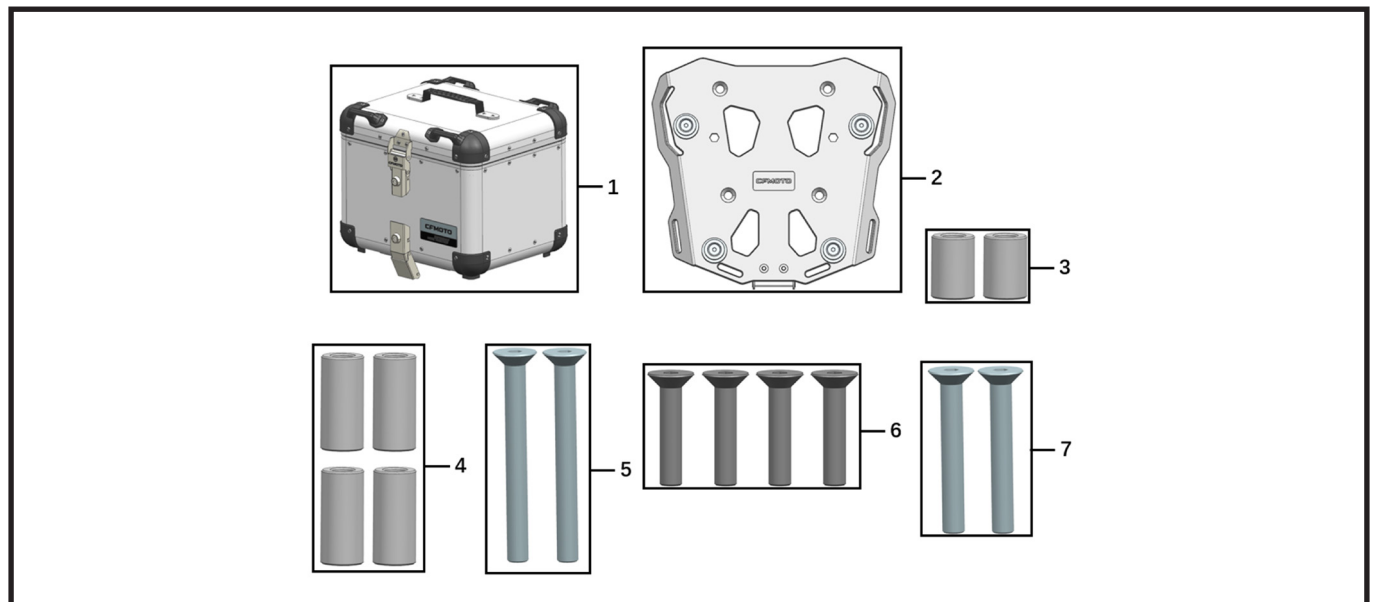


TOOL LIST:

ITEM	DESCRIPTION	REMARK
1	s5 INNER HEX WRENCH	Recommend Tools
2	PROTECTIVE GLOVES	

WORK

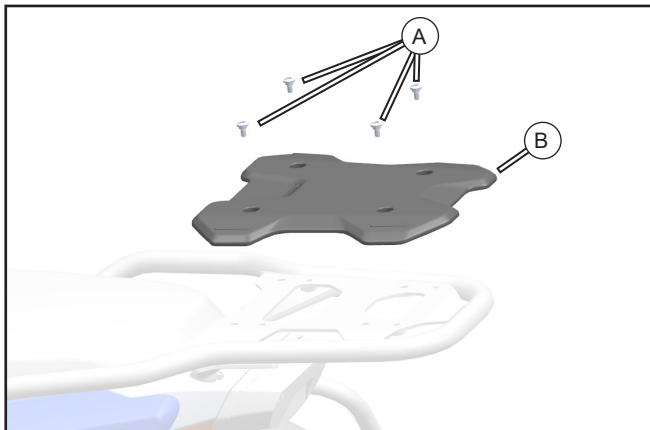


- // Unscrew the four screws (A).
- // Remove the rear armrest cover (B).

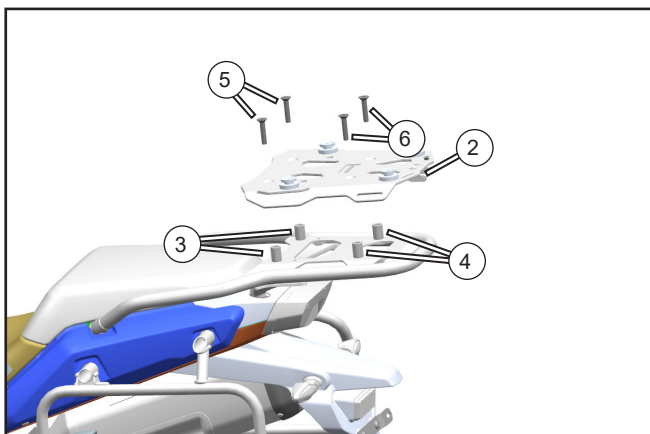

- // Place the front supports (3) and the rear supports (4) into the assembly position. Install the tray (2) to the rear armrest cover with bolts (5,6). Torque the bolts evenly to specification.


- i** - Apply some thread glue when tightening screws.
 -When installing the rear box of CF400-8, CF900-2 or CF800-11, replace (5) with (7).
 -When installing the rear box of CF700-9, replace (3) with (4), and replace the (5) with (6).

BOLT (5)	M8×80	6WWV-803200-5000-20	18-25N.m
BOLT (6)	M8×40	6WWV-803200-5000-21	18-25N.m
BOLT (7)	M8×60	6WWV-803200-5000-22	18-25N.m

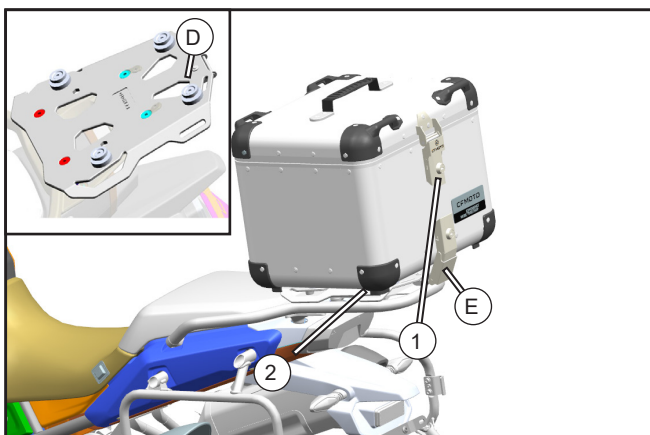

- // Snap the front of the tail box assembly_black (1) into the limit post on the tail box tray assembly (2).
- // Lock the box locking combination (E).

- i** - Make sure the lock is fully locked. If the lock is too tight or too loose, loosen screws (D) and adjust the locking bracket position. After adjustment, tighten screws (D) fully installed.

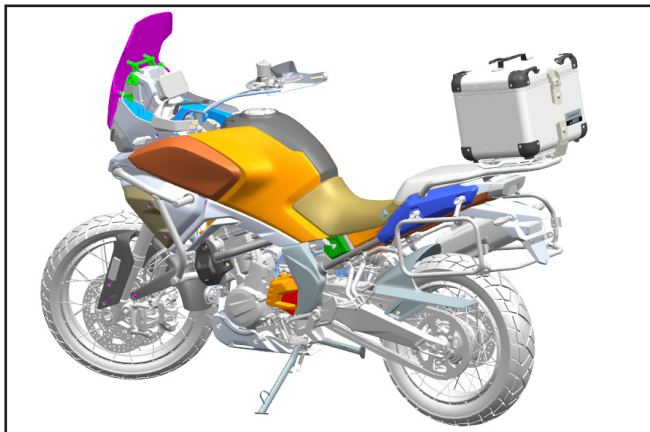

- // Assembly is complete.